


How to wire the K1XM SO2R Box into the KK1L 2x6 Switch/Band Decoder

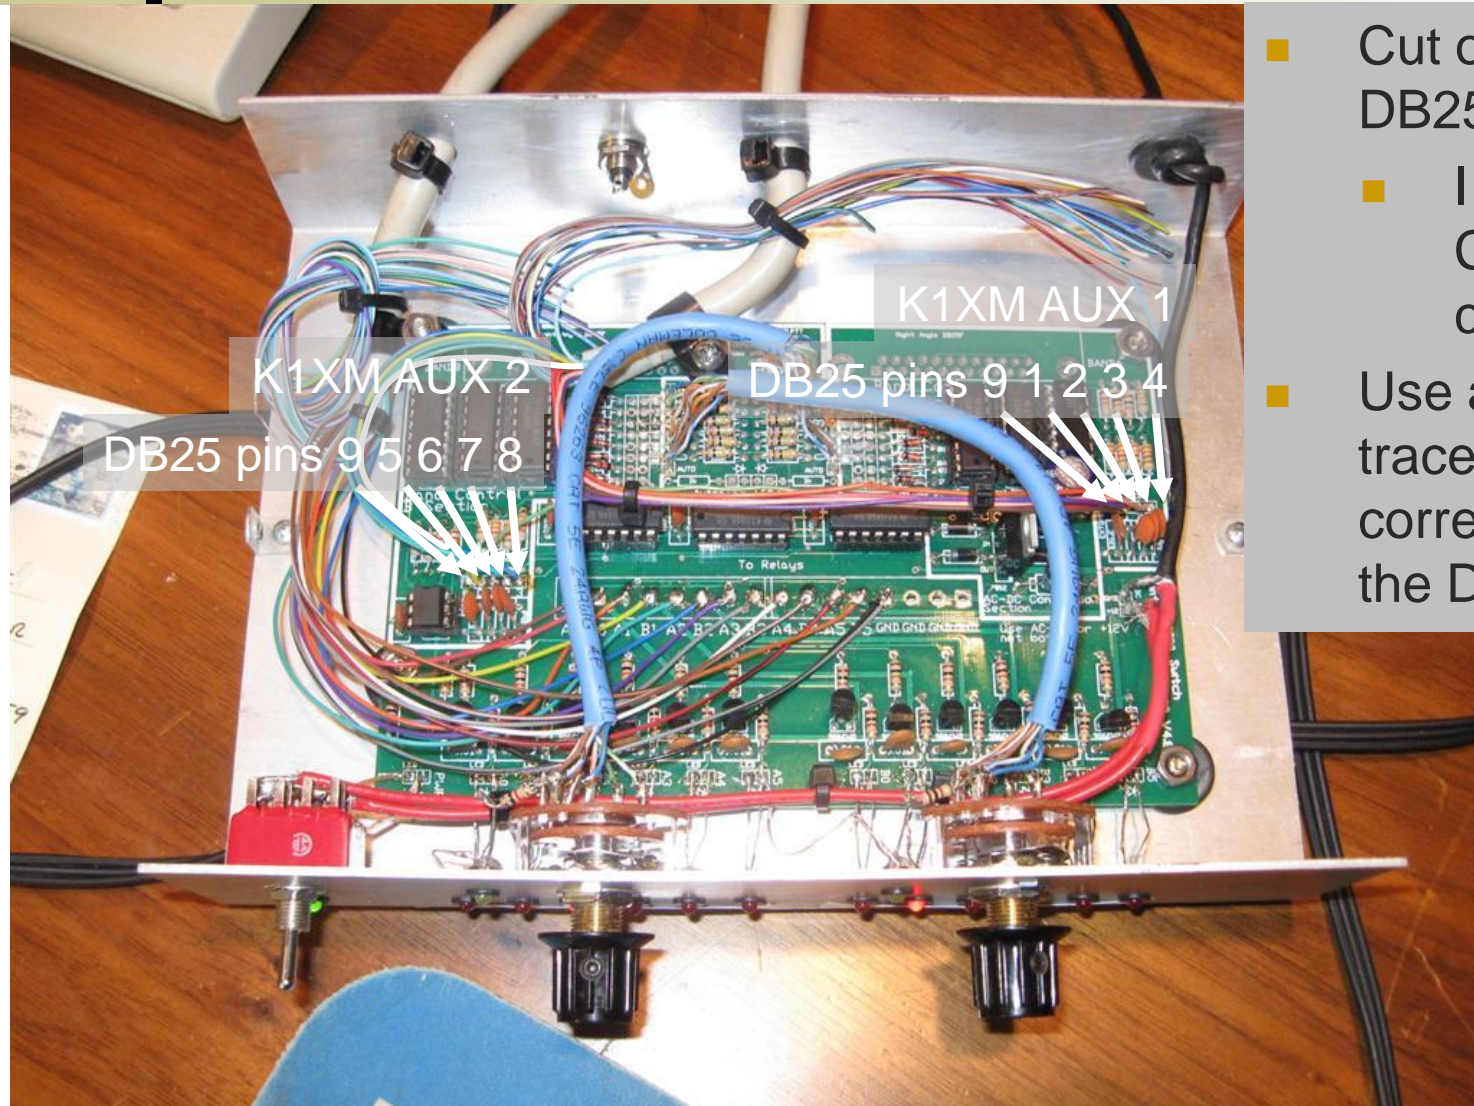

- Cut off the end of a DB25 cable
- I used an old Centronix printer cable
- Use an ohm meter to trace the wires to the correct position on the DB25